


Questions on theory (all diagrams should be drawn by using a pencil and a scale)

*1) What is electromotive force of a cell? [0.25]

Ans: The electromotive force of a cell or EMF of a cell is the maximum potential difference between two electrodes of a cell, i.e. the amount of work done by a cell to move one unit of pos. charge through the whole circuit and bringing it back to the starting point.

*2) See Figure 1. Draw it and work out the rule of voltage division for this circuit. [0.25]

Ans:

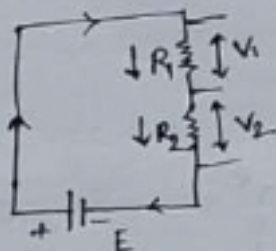

according to Ohm's law, $V_1 = IR_1$
 $V_2 = IR_2$

$$\therefore E = V_1 + V_2$$

$$= IR_1 + IR_2$$

$$= I(R_1 + R_2)$$

$$\therefore I = \frac{E}{R_1 + R_2}$$

we get,


$$\therefore V_1 = \frac{R_1}{(R_1 + R_2)} E \quad \text{or}$$

$$\therefore V_2 = \frac{R_2}{(R_1 + R_2)} E$$

$$\left| \begin{array}{l} V_1 = IR_1 \\ \therefore I = \frac{V_1}{R_1} \end{array} \right| \quad \left| I = \frac{V_2}{R_2} \right|$$

*3) See Figure 2. Draw it and work out an expression of V_{out} in terms of E , l , L , R , R_h and σ . σ is the resistance per unit length of the conductor AB. R is the total resistance of the conductor. [1]

Ans:

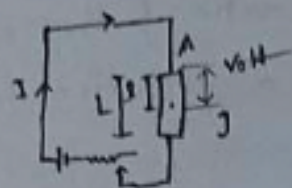

According to potential divider rule:

$$V_{out} = \frac{R_{AB}}{R_{AB} + R_h} E$$


$$= \frac{R_{AB}}{R + R_h} E$$

$$= \frac{L\sigma}{L\sigma + R_h} E$$

$$\therefore V_{out} = \frac{E}{L + \frac{R_h}{\sigma}} l$$

*4) See Figure 3. Draw it and work out an expression of the current passing through the galvanometer, I_G as shown in equation (6). [2]

Ans:

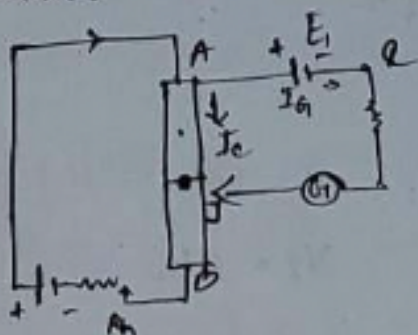

According to Ohm's Law,

$$V_A - V_I = I_G R_0$$

Voltage difference across E_1 ,

$$V_A - V_B = E$$

$$\therefore V_A - V_I = E_1 + I_G R_0$$

Total resistance of the conductor

$$R = R_{AB} + R_h$$

If σ is the resistance per unit length of the conductor then

$$R_{AB} = L\sigma \text{ and}$$

$$R = L\sigma$$

$$\therefore \frac{El}{L + \frac{R_h}{\sigma}} = E_1 + I_G R_0$$

$$\Rightarrow \frac{El}{L + \frac{R_h}{\sigma}} = E_1 + I_G R_0$$

$$\therefore I_G = \frac{1}{R_0} \left[\frac{E \cdot l}{L + \frac{R_h}{\sigma}} - E_1 \right]$$

*5) When I_G is zero, then show that, $E_1 = \frac{E}{L + R \frac{W}{S}} l$ [0.25]

Ans: $I_G = \frac{1}{R_G} \left[\frac{E l}{L + R \frac{W}{S}} - E_1 \right]$

If, $I_G = 0$

$\frac{1}{R_G} \left[\frac{E l}{L + R \frac{W}{S}} - E_1 \right] = 0 \quad \therefore E_1 = \frac{E l}{L + R \frac{W}{S}}$

*6) If l_1 and l_2 are the length of the segment of the potentiometer's wire and the null point, correspond to E_1 and E_2 , then show that $\frac{E_1}{E_2} = \frac{l_1}{l_2}$ [0.25]


Ans: For, l_1 , $E_1 = \frac{E l_1}{L + R \frac{W}{S}} \quad \text{--- (1)}$

l_2 , $E_2 = \frac{E l_2}{L + R \frac{W}{S}} \quad \text{--- (2)}$

① ÷ ②

$\frac{E_1}{E_2} = \frac{l_1}{l_2}$

*7) Draw the schematic diagram of the circuit construction to determine the ratio of the electromotive forces of two given cells by using a potentiometer. [0.5]

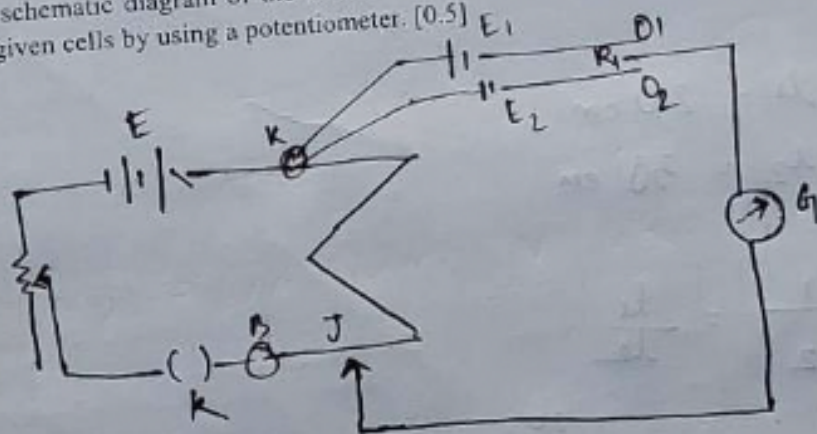

- 8) See the Figure 5 which shows the circuit construction to compare the emf of two cells with a potentiometer. When OO_1 is connected then the null point of the galvanometer is found at J_1 . When OO_2 is connected then the null point of the galvanometer is found at J_2 . What is the approximate value of $\frac{E_1}{E_2}$? [0.5]

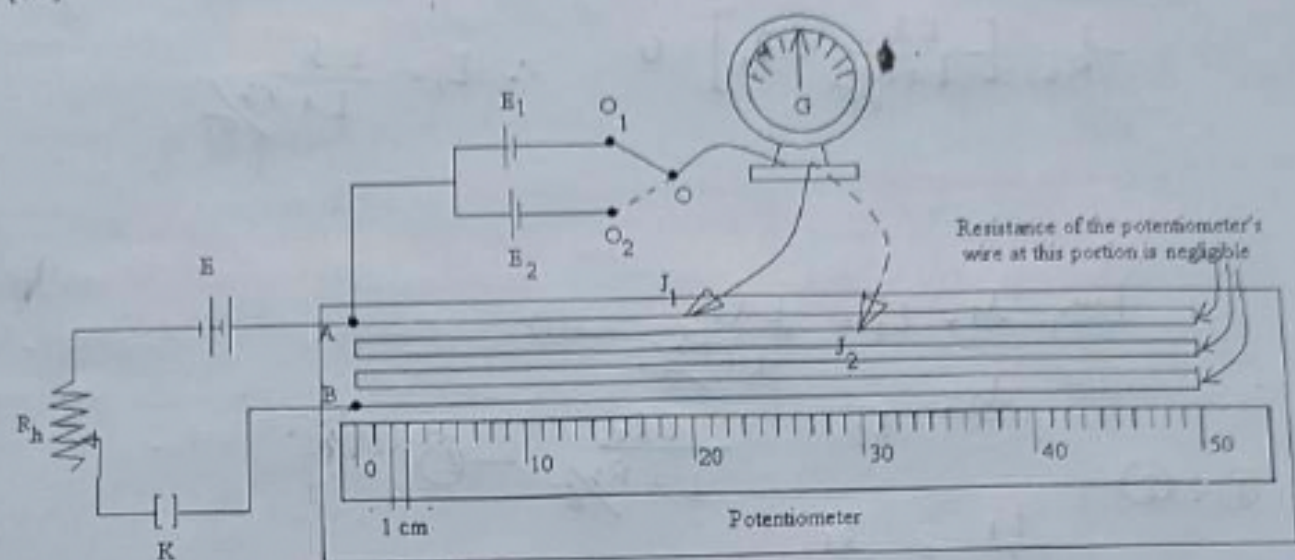


Figure 5: Figure for question 8

Ans:

$$l_1 = 20 \text{ cm}$$

$$l_2 = 30 \text{ cm}$$

$$\frac{E_1}{E_2} = \frac{l_1}{l_2}$$

$$= \frac{20}{30}$$

$$= \frac{2}{3}$$

$$\therefore \frac{E_1}{E_2} = \frac{2}{3}$$

- Draw the data table(s) and write down the variables to be measured shown below (in the 'Data' section), using pencil and ruler BEFORE you go to the lab class.
- Write down your NAME and ID on the top of the page.
- This part should be separated from your Answers of "Questions on Theory" part.
- Keep it with yourself after coming to the lab.

Data

Table: Data for calculating the ratio of emf of two cells

Table: Data for calculating the ratio of emf of two cells							
No. of obs.	Cell	Null points			Total length (cm)	$E_1/E_2 = l_1/l_2$	Mean E_1/E_2
		Wire - segment number	Scale reading (cm)	Mean scale reading (cm)			
1	First (E_1)	7	16.7	600	616.7	1.06	1.0425
	Second (E_2)	6	18.7	500	581.3		
2	First (E_1)	7	3.5	600	603.5	1.03	
	Second (E_2)	6	18.3	500	581.7		
3	First (E_1)	7	10.5	600	610.5	1.04	
	Second (E_2)	6	18.1	500	581.9		
4	First (E_1)	7	3.0	600	603.0	1.04	
	Second (E_2)	6	23.2	500	576.8		
etc.							

- READ the PROCEDURE carefully and perform the experiment by YOURSELVES. If you need help to understand any specific point draw attention of the instructors.
- DO NOT PLAGIARIZE data from other group and/or DO NOT hand in your data to other group. It will bring ZERO mark in this experiment. Repetition of such activities will bring zero mark for the whole lab.
- Perform calculations by following the PROCEDURE. Show every step in the Calculations section.
- Write down the final result(s)

Calculations

$$\text{Mean, } \frac{E_1}{E_2} = \frac{1.06 + 1.03 + 1.04 + 1.04}{4} = 1.0425$$

Results

The ratio of the electromotive force of two cell is
1.0425

Questions for Discussions


- 1) If you see the galvanometer's pointer always deflects towards same direction when you make the contact between the jockey and the wire, near end A and end B; what might be the possible reason(s) for this? [0.5]

Ans: When I make the contact between the jockey and the wire, near A and B; the possible reason might be the resistance of rheostat; if the resistance of the rheostat increase a lot then the galvanometer pointer always deflects to the same direction as the wire and the jockey.


- 2) We can use a voltmeter or a multi-meter to measure the emf of a cell. What might be a drawback of using a voltmeter or a multi-meter for this purpose? How can a potentiometer be useful to avoid this drawback? [0.5]

Ans: The drawback of using a voltmeter or a multi-meter may be the internal resistance which can give inaccurate measure of emf of a cell. But potentiometer can be useful to avoid this issue in the first place. On the other hand, potentiometer has no internal resistance. That's why we can get accurate measure of emf of a cell.

- 3) The Figure 6 shows a typical single turn potentiometer, but its structure is quite different from the potentiometer which you have used in the lab. You can see three terminals, and a knob which can be rotated. In the right side, you see its internal structure. The grey colored circular object is a conductor whose resistance can be neglected, an L shaped portion of which touches the circular conductor at a point J as shown in the Figure 6. By rotating the knob we can slide this L shaped portion around the circular conductor. Explain how you can use this single turn potentiometer as a potential divider. [1]

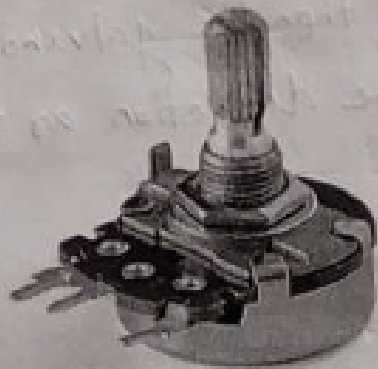

(a) External view

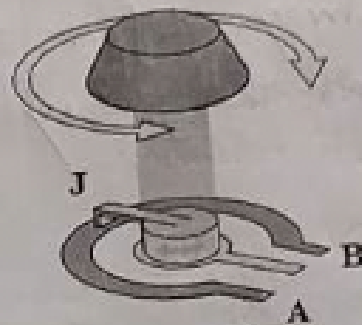

(b) Internal structure

Figure 6: Single turn potentiometer (Courtesy: Wikimedia)

Ans:

In the fig 6(b) we can connect the A and B like a potentiometer. For that, point A is connected to main cell E while point B is connected to switch K. The knob J is used as a Jockey and rotating it can get a output voltage difference V_{out} between point A & J. If the difference between A and J increases V_{out} increases as well. In this way, we can use a single turn potentiometer as a potential divider.